



L-force Drives

Montageanleitung


Mounting Instructions

Instructions de montage

Instrucciones para el montaje

Istruzioni per il montaggio

EYF

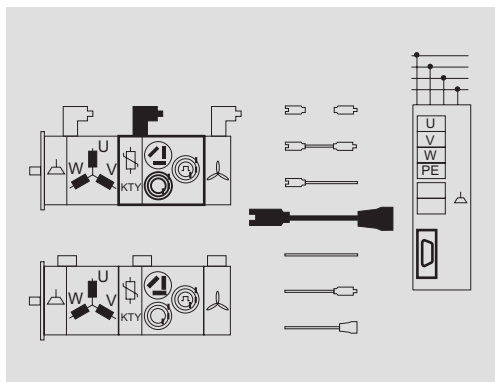

EYFxxxxAxxxxF02W02, EYFxxxxAxxxxF06W02,
EYFxxxxAxxxxF02W04, EYFxxxxAxxxxF06W04,
EYFxxxxAxxxxF02S03, EYFxxxxAxxxxF06S03

Systemleitung für Encoderanschluss

System cable for encoder connection

Câble système pour raccordement codeur

Cable de sistema para la conexión del encoder

Cavo di sistema per collegamento encoder

Lenze



Lesen Sie die Dokumentation zum Grundgerät und zum Motor, bevor Sie mit den Arbeiten beginnen.



Please read the documentation for the basic device and the motor before you start working.



Veuillez lire attentivement la documentation de l' appareil de base et du moteur avant toute opération !




Lea la documentación del equipo básico y del motor antes de empezar a trabajar.




Prima di iniziare a lavorare, leggere la documentazione relativa all'apparecchio base e al motore.

EYF	xxxx	A	xxxx	F02 F06	W02 W02	
			xxxx	× 0.1 m		
0018	4(2×0.14 mm ²) + (2×1.0 mm ²) [4(2×AWG 26) + (2×AWG 18)]				11.4 mm	 

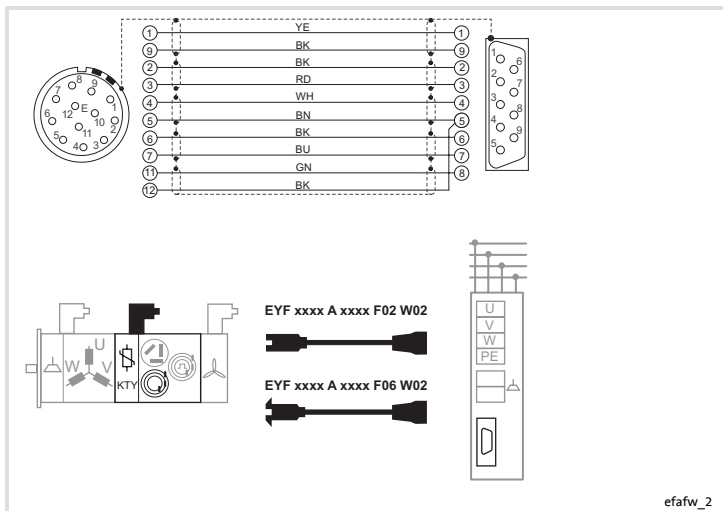


efafw_2

EYF	xxxx	A	xxxx	F02 F06	W04 W04	
			xxxx	× 0.1 m		
0019	$4(2 \times 0.14 \text{ mm}^2) + 2(1 \times 1.0 \text{ mm}^2)$ $[4(2 \times \text{AWG } 26) + 2(1 \times \text{AWG } 18)]$				11.7 mm	

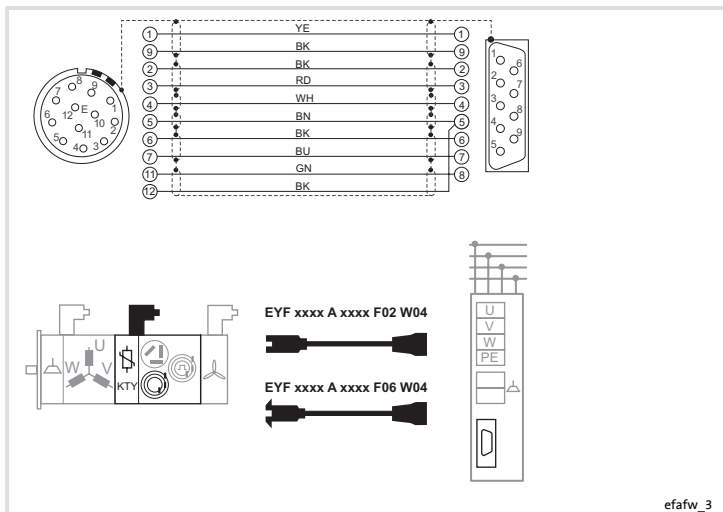


efafw_3

EYF	xxxx	A	xxxx	F02 F06	S03 S03	
			xxxx	× 0.1 m		
0018	4(2×0.14 mm ²) + (2×1.0 mm ²) [4(2×AWG 26) + (2×AWG 18)]				11.4 mm	

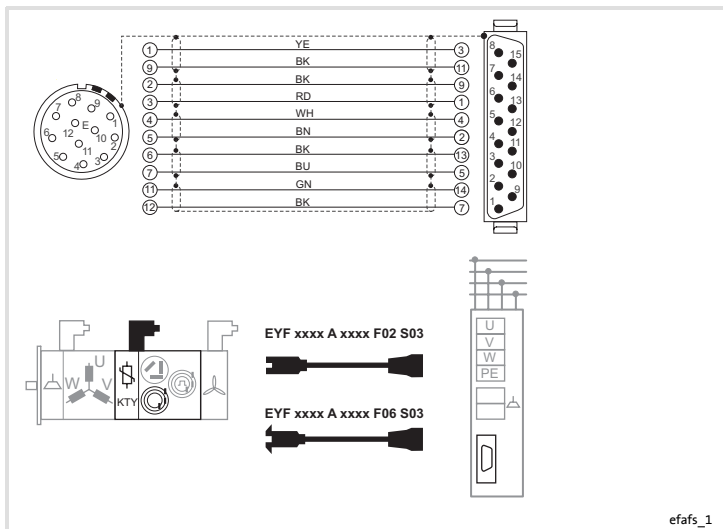

EYF	xxxx	A	xxxx	F02 F06	S03 S03	
			xxxx	× 0.1 m		
0019	4(2×0.14 mm ²) + 2(1×1.0 mm ²) [4(2×AWG 26) + 2(1×AWG 18)]				11.7 mm	

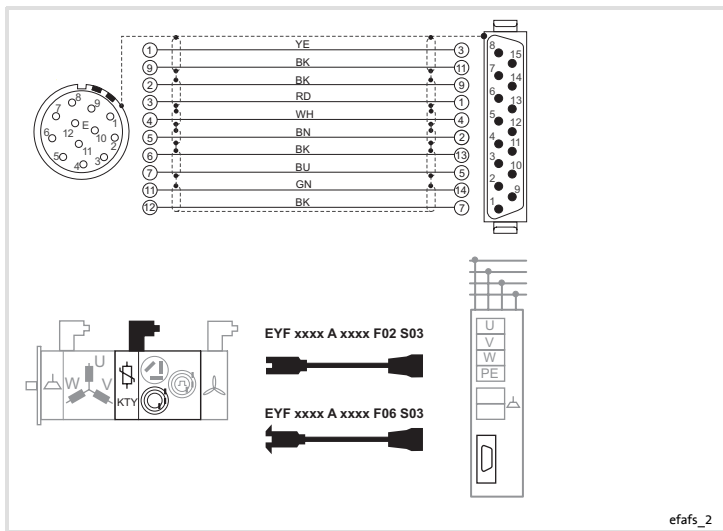

		
		$r > 5 \times d$
		$r > 10 \times d$
		$v < 3 \text{ m/s}$
		$a < 5 \text{ m/s}^2$
		$n > 2,5 \text{ Mio.}$
	GN	BK
	 	 

		UL-Recognized		
				
	2006/95/EG	CYJV2, CYJV8	ECBT2, ECBT8	AVLV8
	50 V	125 V	50 V	300 V
	$\leq 80^\circ\text{C}$			$\leq 80^\circ\text{C}$

		UL-Recognized		
				
	2006/95/EG	CYJV2, CYJV8	ECBT2, ECBT8	AVLV2
	50 V	125 V	50 V	300 V
	$\leq 80^\circ\text{C}$			$\leq 80^\circ\text{C}$



© 05/2009



Lenze Automation GmbH
Grünstraße 36
D-40667 Meerbusch
Germany



+49 (0)21 32 / 99 04-0



+49 (0)21 32 / 7 21 90



Lenze@Lenze.de



www.Lenze.com

Service Lenze Service GmbH
Breslauer Straße 3
D-32699 Extertal
Germany



00 80 00 / 24 4 68 77 (24 h helpline)



+49 (0)51 54 / 82-11 12



Service@Lenze.de

EDKYFAXF02-W02 ■ 13294124 ■ DE/EN/FR/ES/IT ■ 5.0 ■ TD34

10 9 8 7 6 5 4 3 2 1